


CON-019G Issue G Sheet 2 of 2 18/2/2008 Reference:- SL3000-0090 & SL3000-0092

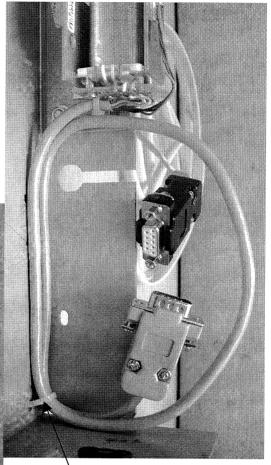

SL3000-0090


SL3000-0092


The Adaptor Cable is required fitted to the CON-019F Cable inside the Cash Base.
Use 70215 Strain Relief

Coil the Release Mechanism Cable and Tie to Baseboard as shown.

Connect Socket of
Adaptor Cable
(22767-030) to the
Release Mechanism
Cable Plug, Fit Strain
Relief (70215) keeping
Connectors close to the
Back of the Baseboard.

Fold Release
Mechanism Cable —
downwards and Tie
Cable Bunch to
Baseboard as Shown.

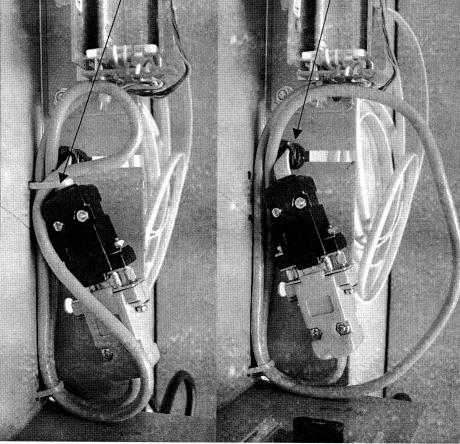

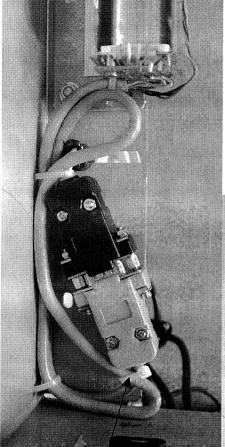

Fold remaining loop of Release Mechanism
Cable under Connector
Hood and Tie Cables together.